




**CORDLESS
FLOOR-WASHER/POLISHER**
Lithium-ion battery: 14.4V 2200 mAh
Model FP80


Care & Use Instructions

Ewbank LLC,
8261 Highway 73, Suite F, Stanley,
NC 28164, USA

Tel: 855-439-2265
Email: enquiries@ewbankus.com
www.ewbankus.com

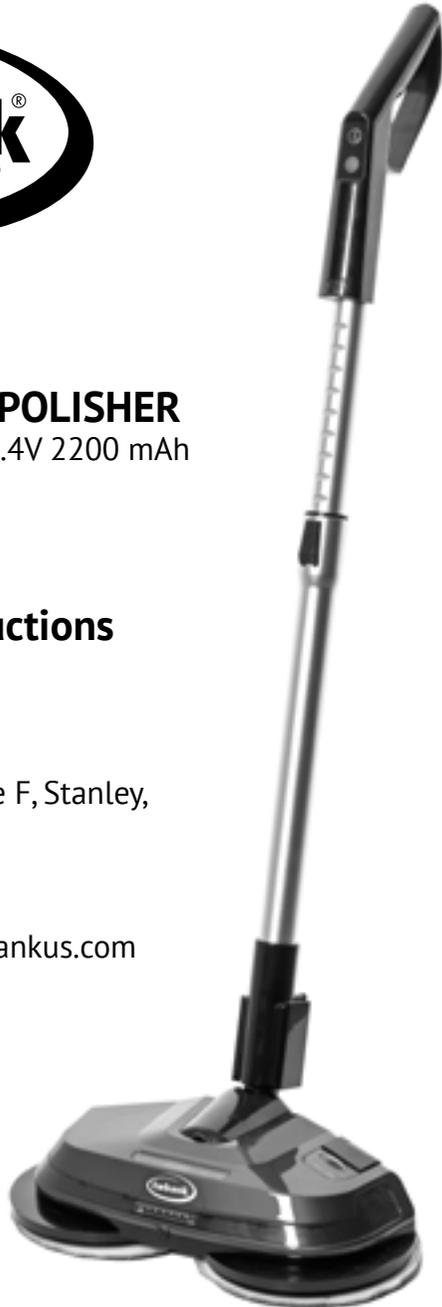

Pack contents

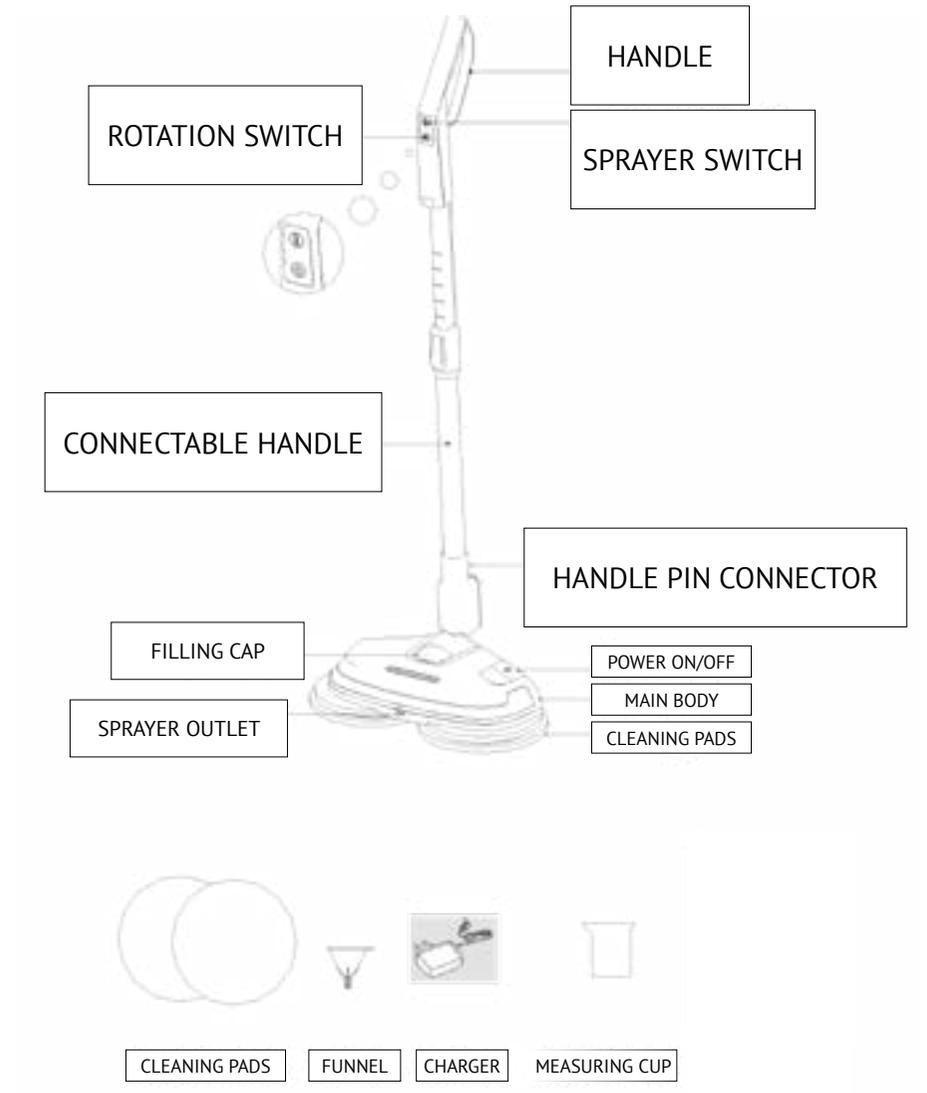

Safety Instructions - CAUTION

DO NOT:

- Modify the unit in any way. It is dangerous voids the warranty.
- Handle the unit with wet hands.

WARNING!

1. Follow the assembly process in this manual. The manual will give the important instructions about the assembly and safety.
2. After unpacking, make sure that the product is intact with no visible signs of damage caused by transport, should you have any doubts, do not use the product and call our Quality department. All packing materials (plastic wrapping, cardboard box, etc.) are potentially dangerous and must be kept out of children's reach.
3. This product is only designed for domestic applications, any other usage is unsuitable and will not be covered by warranty.
4. Before charging the product for the first time, check that the rating plate specifications on the adaptor correspond to your electrical power supply.
5. The product must only be used with the charging adaptor supplied with the product or a replacement purchased from Ewbank or one of our distributors.
6. Never use the charging station with multiple plug or extended power cord. The charging plug needs to fit directly into the socket.


Safety Instructions - CAUTION

7. Don't plug the equipment into other devices such as timer, remote controlled device or similar equipment.
8. Please do not leave the product when it is powered on.
9. After charging has finished, and you are removing from the wall socket, pull out by the plug of adaptor only, do not pull by the power cord or charging station.
10. Before cleaning and maintaining the product, please remove the power cord from the outlet and switch off the machine.
11. If the product stops working or there is an abnormal sound, please switch the power off and contact our Service Department.
12. Never try to replace the power cord. If the cord or plug is damaged or needs to be replaced then please contact our Service Department.
13. NEVER use with flammable or combustible liquids such as gasoline, other volatile substances or burning embers.
14. NEVER use in the presence of explosive liquids, vapors or explosive dust such as coal or grain.
15. This product can only be used by children aged from 14 years and above. Persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge must have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved. Children must not play with the product.


Safety Instructions - CAUTION

16. Never use on a wet floor, do not allow to get wet in the rain. Otherwise the motor will be at high risk of being burnt out.
17. The product should be kept far away from heat sources (such as central heating radiators, ovens, etc.) to avoid damage to the product.
18. Before using the product, please remove any large or sharp matter on the floor to avoid damaging the plastic parts, filter and motor.
22. In order to protect the battery, the unit cannot be switched on while it is being charged, the unit will not operate.
23. If you are replacing the batteries, the old batteries must be correctly recycled.
24. Please use the product according to these instructions and use only Ewbank accessories.
25. The battery is Lithium-Ion, rechargeable. Each of the 6 cells is 3.7V these are packaged into a single unit. The maximum power capacity is 2200mAh.
26. For initial charging, insert the power cord into the wall socket and the other end insert into the main body or the charging station, the indicator light will flicker until the battery is full, then indicator light will stop flickering and remain lit. It should take 8 hours for this process on the first charge.


Assembling ready for use

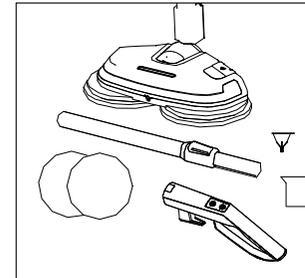

- 1. Identify the components required.**
Take the main body and the two part handle out of the box.

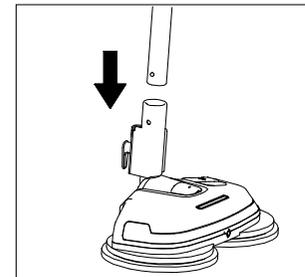

- 2. Attach telescopic part of handle.**
Slide the bottom end of telescopic handle onto the main body until it clicks into place. After connecting, please pull tightly to ensure the handle is securely locked in place.

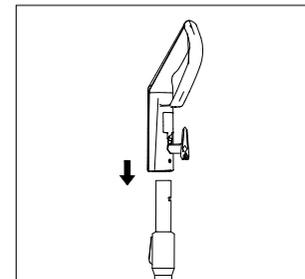


- 3. Install batteries and fit top part of handle.**
Open the battery cover in the back part of handle and insert the two AAA, 1.5v batteries. Replace the battery cover.

Connect the handle to the telescopic handle, until it clicks into place. After connecting, please pull tightly to ensure the handle is securely locked in place.

How to operate

1. Make sure the pads are clean.

Twist and wring out any excess water.

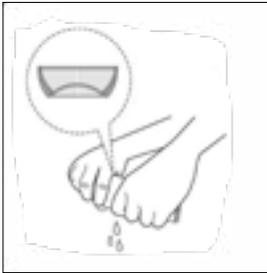


5. Clear the floor of debris and foreign objects.

We suggested a quick vacuum before cleaning.



2. Fix the pads to the rotating base.

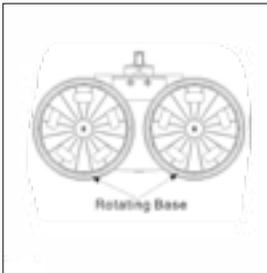


6. Step on the switch to power the rotating bases in the head unit.




3. Ensure the pads are located centrally on each base.

Press pads firmly onto the rotating bases.

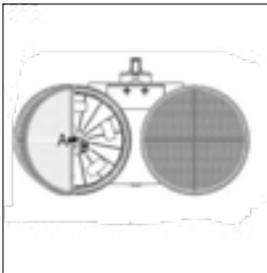


7. Press the power button on the handle to power the sprayer. Ensure you have fitted batteries.

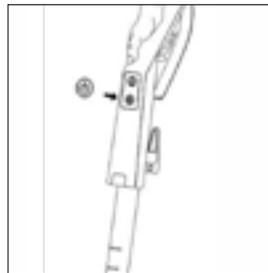

4. Fill the spray container with water.




8. When required, press the spray button on the handle.

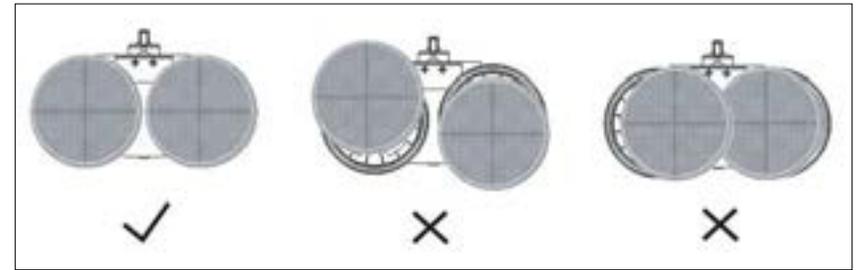

Always ensure the pads are located centrally on each rotating base.


Caring for your cleaning pads - washing

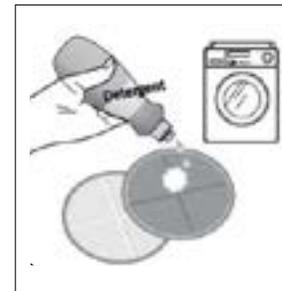

When machine washing apply a little detergent to each pad directly.




When hand washing, use two pads to scrub them clean.

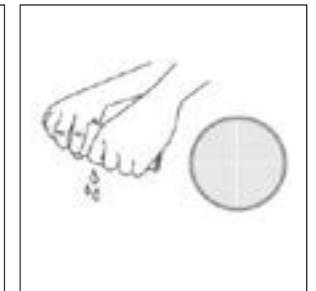


Twist and wring out any excess water.



Remove all debris from the pads to avoid damage to the floor when cleaning.

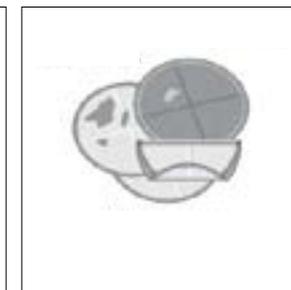

Wash separately from other items..

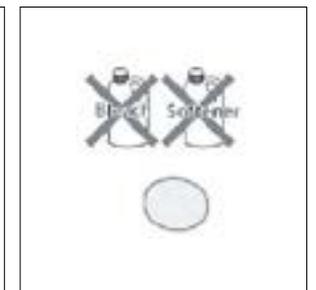

Never use bleach or fabric softener on the pads.

Caring for your cleaning pads - washing

Problem

Possible fault/solution

The Floor Polisher/washer won't start?

- Please ensure whether the product has been sufficiently charged.
- Please ensure the batteries in the handle have been installed correctly and they haven't discharged.
- Please ensure the normal running time of 20 minutes hasn't been exceeded.

Excessive water is left on the floor.

Please ensure the pads are not full of soaked up water.

Excessive vibrations in the head of the unit.

Please ensure that the pads have been installed centrally on the rotating heads.

There is an unusual noise when cleaning.

- The unit will emit a the light "buzzing" sound. This is normal.
- Other noising could be caused by foreign objects attached to the cleaning pads.

Technical Data

Rated Voltage	Input:100-240V,50/60Hz Output:18V 1200mA
Rated Power	85W
water tank capacity	200mL
Unit dimension	400*210*1250
Net Weight	2.96Kg

INFORMATION ON THE DISPOSAL OF WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT KNOWN AS WEEE

Your attention is brought to new directives applicable to the disposal of this electrical equipment where, in accordance with legislation, this product must not be disposed of in your normal household waste. Instead it is your responsibility to dispose of this type of waste by handing it over to special designated collection points for recovery and recycling. This product is marked with a 'Wheelie bin' symbol with a cross on it to remind you of this action. The objective of this directive is to help conserve resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste please contact your local authority, take back facilities are free of charge.



Your Guarantee

This product is guaranteed for a period of 12 months. This does not cover normal wear and tear, abuse or replacement of parts other than specified. While every possible care is taken by Ewbank Products Ltd. to ensure that our products leave the factory in good working order, Ewbank Products Ltd. cannot under any circumstances accept liability for problems or damage caused by their subsequent use. It is the responsibility of the user to ensure the surfaces to be treated or cleaned are suitable for vacuuming. This guarantee does not affect your statutory rights. This guarantee excludes the use for rental or commercial. In the event of a fault occurring please contact our helpline before returning the unit to our Service Department at the address below together with a copy of your purchase receipt.

Ewbank LLC,

8261 Highway 73, Suite F, Stanley, NC 28164, USA

Tel: 855-439-2265

Email: enquiries@ewbankus.com

www.ewbankus.com

Made in China

EB0992 01/18