



CORDLESS-WASHER & POLISHER

Lithium-ion battery: 14.8V 2200 mAh

Electra 3

Model FP90

Care & Use Instructions

Thank you for purchasing a Ewbank product. We have been manufacturing cleaning products since 1880 and we want to ensure that you get the best from this polisher so please read these instructions carefully and retain for reference in the future

Manufactured by: Ewbank Products Ltd,

Distributed by the Bluestem Group

38 Bluestem Road, Ransomes, Europark, Ipswich, IP39RR, UK


Telephone: 01473276433

Email: sales@pikapak.co.uk

www.ewbank.co.uk



Pack contents

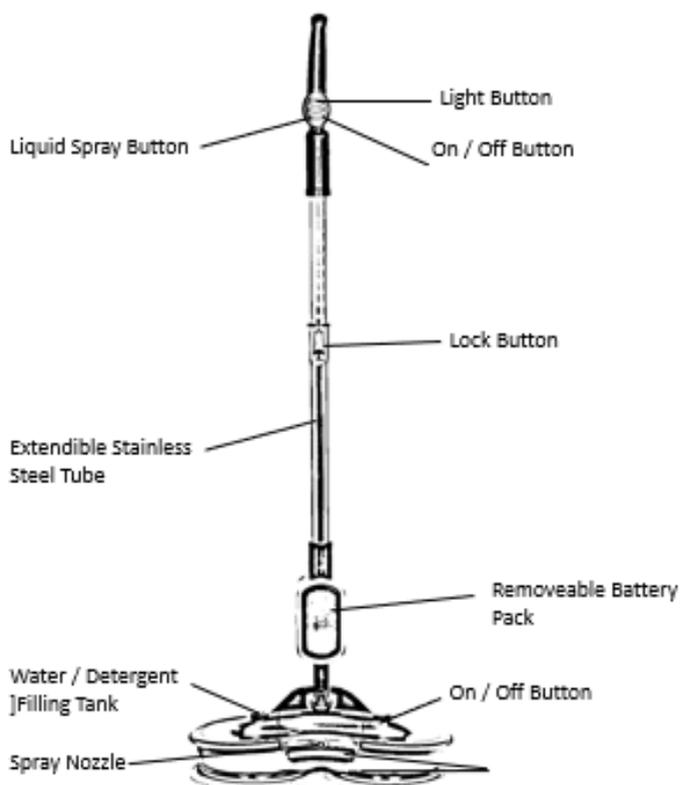

Scouring Pads

Washing Pads

Polishing Pads



Instruction Manual



Measuring Jug



Charger

This machine is designed to remove the hassle of the traditional mop and bucket when cleaning or polishing. Its 250- revolutions per minute motor and 500ml tank makes achieving that sparkling clean easy with the built-in electric spray. It has a 180° rotation to get around corners and a slim profile for under furniture.

The Cordless Washer and Polisher comes with 3 pairs of interchangeable reusable pads. 2 white scouring pads, 2 blue macrofibre washing pads and 2 yellow chenille polishing pads allowing you to use the Cordless Washer & Polisher from unboxing.

Safety Instructions – CAUTION

DO NOT:

- Modify the unit in any way. It is dangerous voids the warranty
- Handle the unit with wet hands.

WARNING!

1. Follow the assembly process in this manual. The manual will give the important instructions about the assembly and safety.
2. After unpacking, make sure that the product is intact with no visible signs of damage caused by transport, should you have any doubts, do not use the product, and call our Quality department. All packing materials (plastic wrapping, cardboard box, etc.) are potentially dangerous and must be kept out of children's reach.
3. This product is only designed for domestic applications, any other usage is unsuitable and will not be covered by warranty.
4. Before charging the product for the first time, check that the rating plate specifications on the adaptor correspond to your electrical power supply.
5. The product must only be used with the charging adaptor supplied with the product or a replacement purchased from Ewbank or one of our distributors.

6. Never use the charging station with multiple plug or extended power cord. The charging plug needs to fit directly into the socket.
7. Do not plug the equipment into other devices such as timer, remote controlled device or similar equipment

Safety Instructions - CAUTION


8. Please do not leave the unattended product when it is powered on.
9. After charging has finished, and you are removing from the wall socket, pull out by the plug of adaptor only, do not pull by the power cord
10. Before cleaning and maintaining the product, please remove the power cord from the outlet and switch off the machine.
11. If the product stops working or there is an abnormal sound, please switch the power off and contact our Service Department.
12. Never try to replace the power cord. If the cord or plug is damaged or needs to be replaced, then please contact our Service Department.
13. NEVER use with flammable or combustible liquids such as gasoline, other volatile substances or burning embers.
14. NEVER use in the presence of explosive liquids, vapors, or explosive dust such as coal or grain.
15. This product can only be used by children aged from 14 years and above. Persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge must have been given supervision or instruction concerning use of the product in a safe way and understand the hazards involved. Children must not play with the product.
16. Never submerge in water. Otherwise, the motor will be at high

risk of being burnt out. The product should be kept far away from heat sources (such as central heating radiators, ovens, etc.) to avoid damage to the product.


17. Before using the product, please remove any large or sharp matter on the floor to avoid damaging the plastic parts, filter, and motor.
18. Ensure the polisher is switched off at the on/off push button switch when removing the cleaning pads
19. In order to protect the battery, the unit cannot be switched on while it is being charged, the unit will not operate.
20. If you are replacing the batteries, the old batteries must be correctly recycled. Never attempt to burn batteries
21. Ensure fingers, hair, jewelry etc. are kept away from rotating parts
22. Please use the product according to these instructions and use only Ewbank accessories.
23. For initial charging, insert the power cord into the wall socket and the other end insert into the main body of the product, the indicator light on the front of the machine will display the charge level on the battery. It should take 4.5 hours for this process on the first charge.
24. Always store in a cool place

Safety Instructions – CAUTION

Identify the components required.

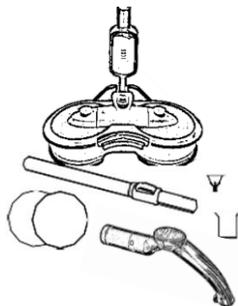

Take the main body and the two-part handle out of the box.

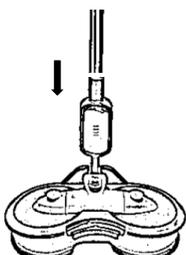

1. Attach telescopic part of handle.

Slide the bottom end of telescopic handle onto the main body until it clicks into place. After connecting, please pull tightly to ensure the handle is securely locked in place.

2. Install batteries and fit top part of handle.



Open the battery cover in the back part of handle and insert the two AA batteries. Replace the battery cover.


Connect the handle to the telescopic handle, until it clicks into place. After connecting, please pull tightly to ensure the handle is securely locked in place.

How to operate




1. Make sure the pads are clean.

Twist and wring out any excess water.

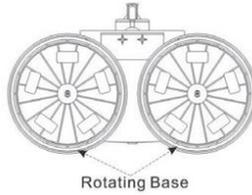


2. Fix the pads to the rotating base.

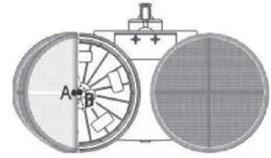


3. Ensure the pads are central on each base.

Press pads firmly onto the rotating bases.

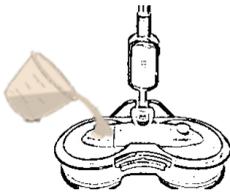


4. Fill the spray container with water

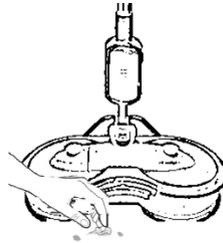

5. Clear the surface of debris and foreign objects.

We suggest a quick vacuum before cleaning

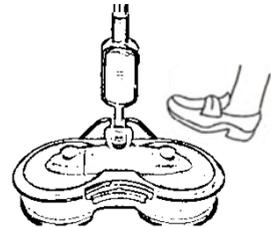


6. Step on the switch to power the rotating bases in the head unit.





7. Press the power button on the handle to power the sprayer.

Ensure you have fitted batteries

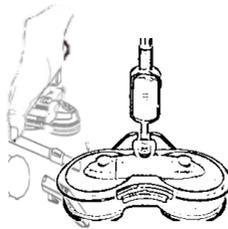


8. When required, press the spray button on the handle

Caring for your cleaning pads – fit correctly in use

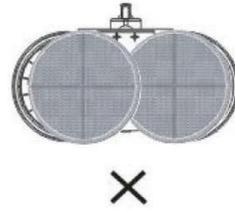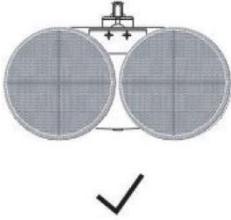


Caring for your cleaning pads – washing

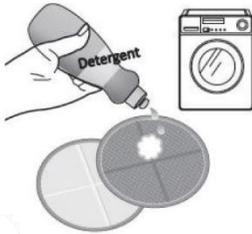

When machine washing, apply a little detergent to each pad directly.




When hand washing, rub the two pads together to scrub them clean

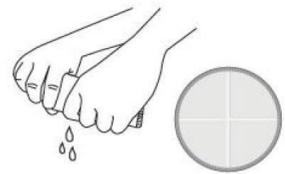


Twist and wring out any excess water.



Remove all debris from the pads to avoid damage to the floor when cleaning.

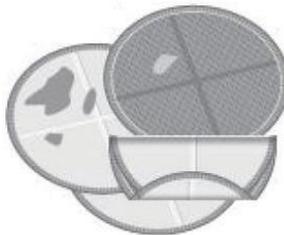

Wash separately from other items.

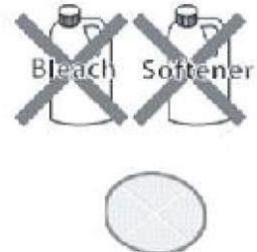

Never use bleach or fabric softener on the pads

Problem	Possible fault/solution
<i>The Cordless Polisher/washer won't start?</i>	<ul style="list-style-type: none"> - Please ensure the product has been sufficiently charged. - Ensure the charging cable has been tightly inserted - Please ensure the batteries in the handle are not empty and that they have been installed correctly. - Please ensure the normal running time of 25 minutes has not been exceeded.
<i>The pads and pump won't turn on</i>	<ul style="list-style-type: none"> - Please press the foot switch on the top of the polisher head to start the machine. The LED lights will come on as an indicator.
<i>Excessive water is left on the floor</i>	<ul style="list-style-type: none"> - Please ensure the pads are not full of soaked up water.
<i>Excessive vibrations in the head of the unit.</i>	<ul style="list-style-type: none"> - Please ensure that the pads have been installed centrally on the rotating heads.
<i>There is an unusual noise when cleaning.</i>	<ul style="list-style-type: none"> - The unit will emit a light "buzzing" sound. This is normal. - Other noising could be caused by foreign objects attached to the cleaning pads.

Technical Data

Rated Voltage	Input: 220V, 50/60Hz Output: 14.8V 2200mAh
---------------	---

Rated Power	80W
Water Tank Capacity	500ml
Unit Dimension	35*17.5*139cm
Net Weight	4.12kg

INFORMATION ON THE DISPOSAL OF WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT KNOWN AS WEEE

Your attention is brought to new directives applicable to the disposal of this electrical equipment where, in accordance with legislation, this product must not be disposed of in your normal household waste. Instead, it is your responsibility to dispose of this type of waste by handing it over to special designated collection points for recovery and recycling. This product is marked with a 'Wheelie bin' symbol with a cross on it to remind you of this action. The objective of this directive is to help conserve resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste please contact your local authority, take back facilities are free of charge.



Your Warranty

This product is guaranteed for a period of 12 months against faulty materials and workmanship. While every possible care is taken by Ewbank to ensure that our products leave the factory in good working order, Ewbank cannot under any circumstances accept liability for problems or damage caused by their subsequent use. It is the responsibility of the user to ensure the surfaces to be treated or cleaned are suitable for polishing. This warranty does not affect your statutory rights. This warranty excludes the use for rental. In the event of a fault occurring please contact our helpline before returning the unit to our Service Department at the address below together with a copy of your purchase receipt. All repairs will be dealt with speedily.

For service and further information, please contact:
 38 Bluestem Road, Ransomes, Europark, Ipswich, IP39RR, UK,
 Telephone: 01473276433, Email: sales@pikapak.co.uk,
www.ewbank.co.uk

Made in China EB1125 02/21

CORDLESS WASHER/POLISHER